



# MUL-360 Tensioner for POLYPROPYLENE

## Operation Manual

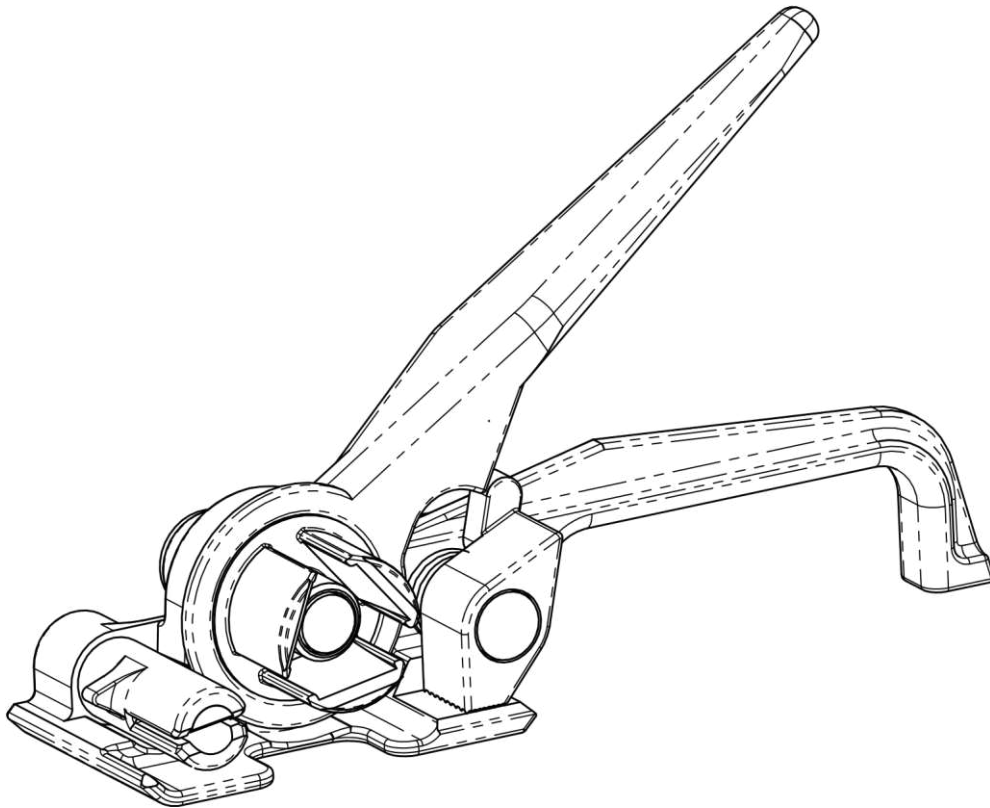


|                 |                     |
|-----------------|---------------------|
| Strap Type      | Polypropylene (PP)  |
| Strap Width     | Up to 5/8" (16 mm)  |
| Strap Thickness | Up to 0.040" (1 mm) |
| Joint Type      | Seal, buckle        |
| Weight          | 2.6 lbs (1.2 kg)    |
| Footprint       | L: 3"; W: 2"        |
| Handle Length   | 5.5"                |

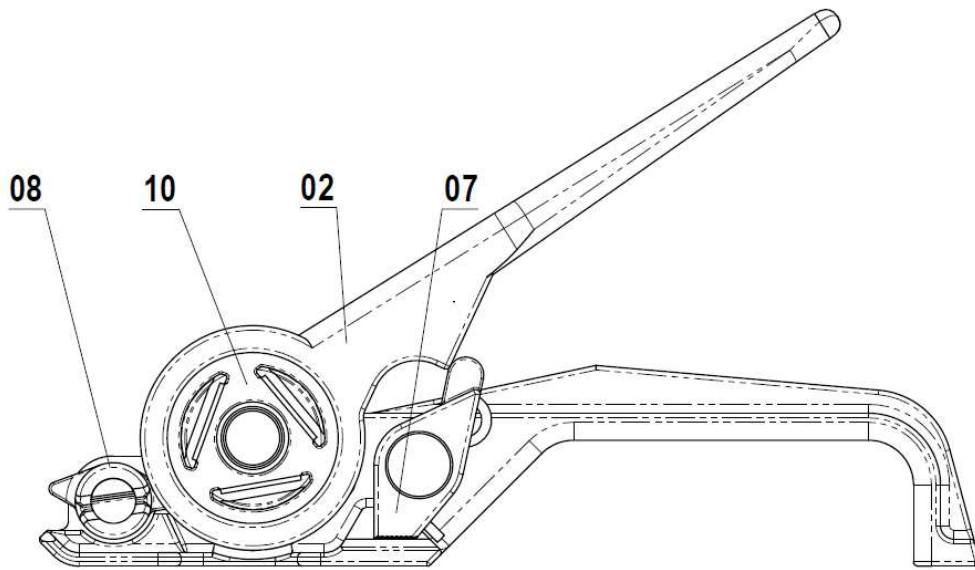


**Fig. 1 – Starting Position**

1. Raise **Gripper Foot 07** by pressing down on **Tension Handle 02**. Load bottom strap **101** under **Cutter Housing 08**, under **Gripper Foot 07** and leave at least 4" of the strap extended out from the front of the tool for seal placement as shown on Fig. 2.

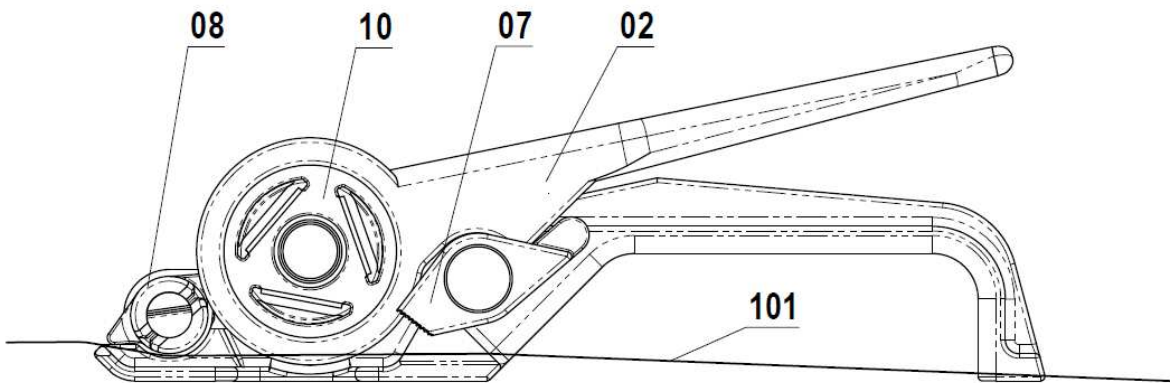

**Fig. 2**

2. Load upper strap **102** through **Cutter Housing 08**, through **Windlass 10** as shown on Fig. 3.

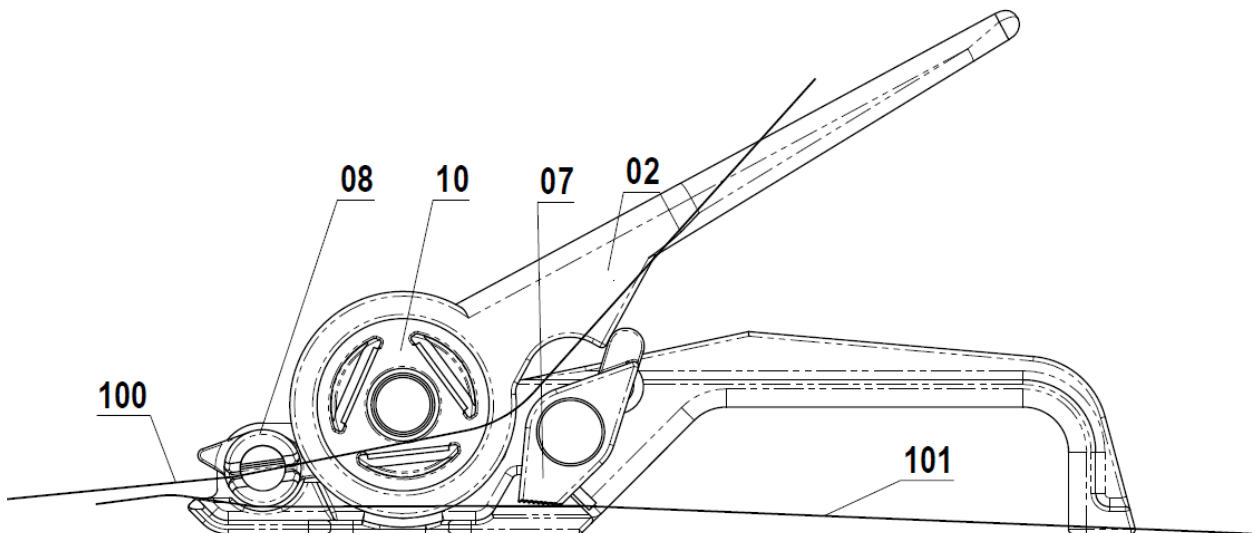

**Fig. 3**

3. Apply tension by ratcheting **Tension Handle 02** as shown on Fig. 4.

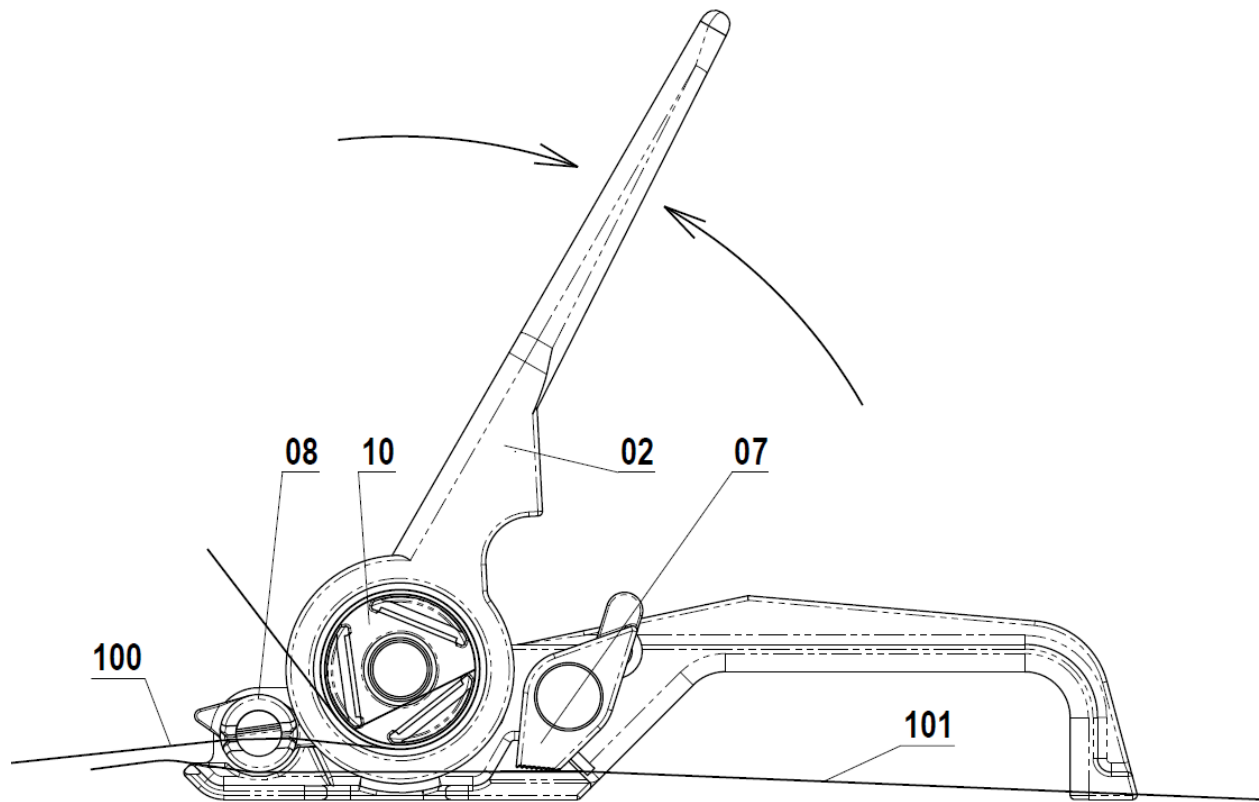


Fig. 4

4. Once satisfactory tension is achieved the strap is ready to be cut. With **Tension Handle 02** in the horizontal position push down on the Handle until the strap is cut and slide the tensioner to the right to release the strap from under the **Gripper Foot 07**. The operation cycle is now complete.

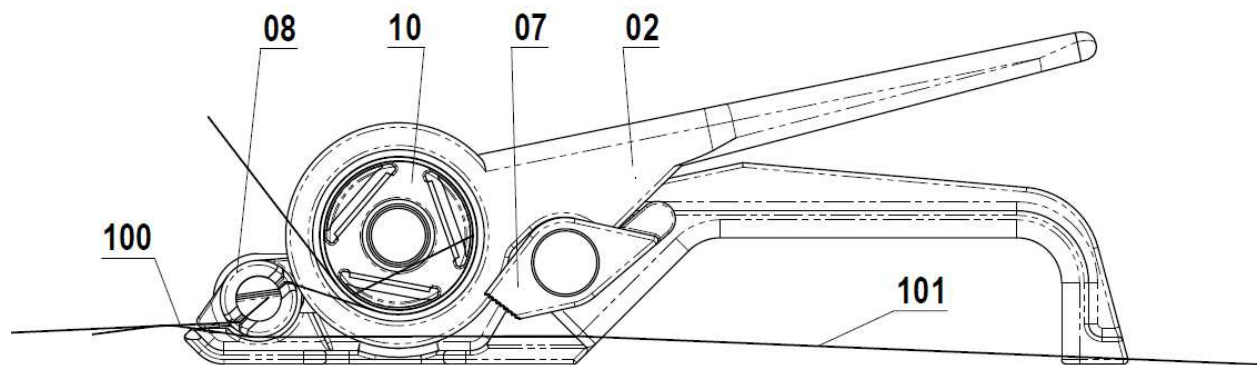


Fig. 5